

Fitting instructions

Perimeter seal

LAS 7001si



Length:

Contents include

Aluminium carrier
Decorative cover strips
Pre-slotted holes
Silicone rubber gaskets
Bag of screws
Fitting instruction

Tools required

Tape measure
Saw (power or hand)
Screw driver
2.5mm drill bit
Drill (power or hand)
Knife
Pencil or marker

For further information about our products please visit our website

www.lorientgroup.com

t: +61 (02) 9907 6221
f: +61 (02) 9907 6152
e: admin@lorientau.com.au

Instructions

It is not necessary to remove the door from its hinges unless otherwise specified.

1. Remove the seal from the packaging and measure the existing head (top) and jambs (sides) of the door frame to determine the seal lengths required.
2. Remove the decorative cover strip from the aluminium carriers.
3. Pull back silicone gasket and cut the aluminium carriers to the lengths required, allowing for corner joints.
4. Cut the decorative cover strip to the lengths required.
5. Slide silicone gasket back into position and cut to required length.
6. Position the seals to the door stops along the top and sides of the door frame and mark out the slotted hole locations with a pencil. (Ensure the top corners are neatly butt-jointed).
7. Lightly screw-fix each length to the door stops through the slotted holes with the screws supplied. (Fixing holes are pre-slotted to enable the seal to be accurately adjusted as required).
8. Close the door and check for a uniform seal around the door by inserting this sheet of paper between the seal and the door face. Resistance should be firm at all points.

9. Tighten the screws and replace the decorative cover strip.

Installation tips:

If used in conjunction with a face fixed threshold seal, the perimeter seal must be fitted to the door frame first.

Should circumstances require that the cover strip be removed, drill a small hole at the bottom of the cover strip and pull with a wire hook or suitable tool.

We recommend the LAS 7001si perimeter seal be fitted with the LAS 8001si or LAS 8003si drop seal.

Important:

Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the door seal periodically to ensure the door assembly to which it is fitted, closes and latches properly.

Please note: Recommendations as to methods, use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete installation detail without prior notice.



Other Lorient products:

Acoustic, smoke & fire seals
Fire resistant glazing systems
Fire resistant door hardware
Air transfer grilles/ dampers